

## 8371


## **Mobile tower**

with stabiliser

Flexible for use anywhere: Assembly could not be more convenient – convenient placement of diagonals and platforms on the same rung of the frame section. Also: optional assembly with height offset, for example in stairwell position. With extremely large platform and four height-adjustable swivel castors.

## **Features:**

- Work platform: 2.95 × 0.65 m
- Castors: Ø 200 mm
- Permissible load: 200 kg/m² (2.0 kN/m²)

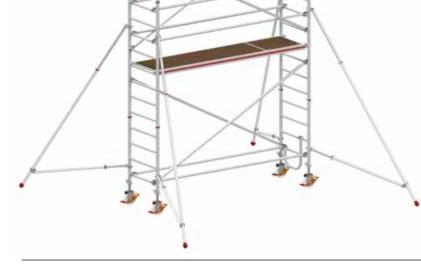

		<b>—</b>									
Reach height (approx. m)	3.40	4.40	5.40	6.40	7.40	8.40	9.40	10.40	11.40	12.40	13.40
Tower height (approx. m)	2.64	3.64	4.64	5.64	6.64	7.64	8.64	9.64	10.64	11.64	12.64
Standing height (approx. m)	1.40	2.40	3.40	4.40	5.40	6.40	7.40	8.40	9.40	10.40	11.40
Platform length (approx. m)	2.95	2.95	2.95	2.95	2.95	2.95	2.95	2.95	2.95	2.95	2.95
Frame section width (approx. m)	0.80	0.80	0.80	0.80	0.80	0.80	0.80	0.80	0.80	0.80	0.80
Ballasting											
Indoor, centre (kg)	80	0	0	0	0	0	0	0	0	0	0
Indoor, on wall (kg)	80	40 (1)	60 (1)	80 (1)	100(1)	120(1)	140(1)	180(1)	200 (1)	220 (1)	240 (1)
Outdoor, centre (kg)	80	0	0	0	0	0	0	not permitted	not permitted	not permitte	ed not permitted
Outdoor, on the wall (kg)	80	60 <sup>(1)</sup>	100(1)	0 <sup>(2)</sup>	0(2)	0(2)	60 <sup>(2)</sup>	not permitted	not permitted	not permitte	ed not permitted
Order no.	837103	837104	837105	837106	837107	837108	837109	837110	837111	837112	837113

(1) Ballasting is not required when using two wall connectors (607141) for pressure support.
(2) Two wall connectors (607141) need to be used for pressure support.
Required additional parts from page 23.
Individual parts and parts list can be found in the instructions for assembly and use on page 67. | Click here.